


## REGULATOR ADJUSTMENT

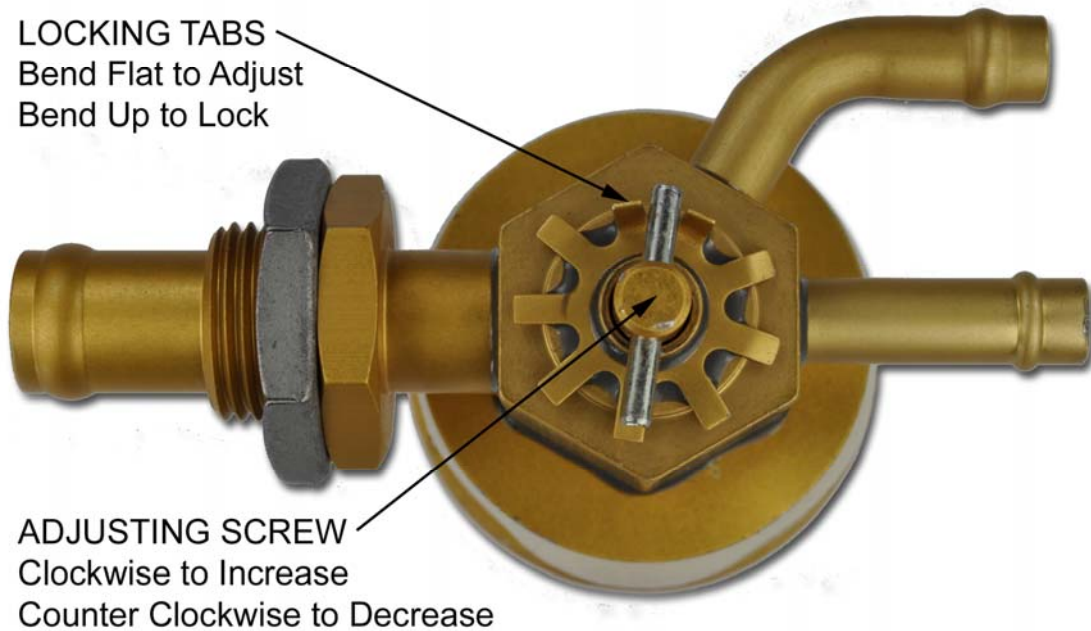

Regulators come factory set however occasionally, depending on the installation, initial adjustments may be necessary. Once they are set the need for readjustment is rare however if you feel it is necessary, first check for leaks, or any other malfunctioning components in the system. Next be sure to replace all system filters.

If adjustment is still determined to be necessary, bend back the locking tabs on bottom of regulator. Turn T handle adjusting screw clockwise to increase vacuum or pressure, or counter clockwise to decrease vacuum or pressure. When decreasing vacuum or pressure it is preferred to adjust a quarter turn down past the point you would like to be then back up to that point. Usually a quarter turn adjustment at a time is sufficient. Remember to reset the locking tabs once you have finished.